

Part Number Cross Reference

Product Number	Product Type	Page	Product Number	Product Type	Page
079-1014	Screw Terminal	28	116-144	Cable Clamp	55
1-144	Ring Terminal	29	127-260	Solder Terminal	48
1-169	Ring Terminal	29	139-144	Cable Clamp	55
2A-169	Solder Terminal	39	139-169	Cable Clamp	55
2A-196	Solder Terminal	39	139-196	Cable Clamp	55
7-120	Solder Terminal	37	141-144	Solder Terminal	39
7-144	Solder Terminal	37	141-169	Solder Terminal	39
7-169	Solder Terminal	37	141-196	Solder Terminal	39
7-196	Solder Terminal	37	146-144	Spring Clip	25
7A-196	Solder Terminal	37	146-144-9	Spring Clip	25
7A-225	Solder Terminal	37	148	Eyelet Terminal	22
7A-250	Solder Terminal	37	149-156	Jumper Terminal	50
7/16 SEMS SCREW	Screw & Wire Clamp	56	176-144	Angle Bracket	52
7/16 632 BET SC	Screw & Wire Clamp	56	190	Eyelet Terminal	22
9-120	Solder Terminal	39	208-250	Ring Terminal	30
9-144	Solder Terminal	39	246-144-125	Angle Bracket	51
9-169	Solder Terminal	39	255-130	Spring Clip	25
9-196	Solder Terminal	39	255-130-9	Spring Clip	25
11-120	Solder Terminal	37	260-165	Angle Bracket	51
11-156	Solder Terminal	37	263-093	Solder Terminal	41
11-169	Solder Terminal	37	271	Eyelet Terminal	23
11A-093	Solder Terminal	37	322-144	Solder Terminal	47
11A-120	Solder Terminal	37	322-156	Solder Terminal	47
11A-144	Solder Terminal	37	324-156	Solder Terminal	46
11A-156	Solder Terminal	37	328-125	Solder Terminal	39
11A-169	Solder Terminal	37	328-144	Solder Terminal	39
11B-144	Solder Terminal	37	328-156	Solder Terminal	39
18-120-1	Ring Terminal	31	329-125	Solder Terminal	40
18-130	Ring Terminal	31	329-144	Solder Terminal	40
18-144	Ring Terminal	31	332	Eyelet Terminal	22
20-144	Solder Terminal	42	333-100	Solder Terminal	47
20-169	Solder Terminal	42	333-120	Solder Terminal	47
20-196	Solder Terminal	42	334-250	Solder Terminal	43
28-144	Ring Terminal	31	334-375	Solder Terminal	43
28-169	Ring Terminal	31	335-196-156	Jumper Terminal	49
28-196	Ring Terminal	31	341-093	Solder Terminal	38
29-196	Solder Terminal	39	341-120	Solder Terminal	38
29-250	Solder Terminal	39	341-125	Solder Terminal	38
29A-187	Solder Terminal	38	342-130	Solder Terminal	42
29A-196	Solder Terminal	38	342-168	Solder Terminal	42
29A-250	Solder Terminal	38	344-120	Solder Terminal	42
46-120	Solder Terminal	43	345-135	Angle Bracket	52
46-144	Solder Terminal	43	348	Screw Terminal	26
46-169	Solder Terminal	43	349-125	Solder Terminal	46
46-196	Solder Terminal	43	349-144	Solder Terminal	46
75-093	Solder Terminal	38	355-136	Solder Terminal	40
75-100	Solder Terminal	38	355-169	Solder Terminal	40
75-120	Solder Terminal	38	355-250	Solder Terminal	40
75-130	Solder Terminal	38	370-144	Angle Bracket	53
75-144	Solder Terminal	38	372-136	Angle Bracket	52
78-144	Cable Clamp	55	376-218	Solder Terminal	47
78-169	Cable Clamp	55	379-510	Solder Terminal	44
78-196	Cable Clamp	55	389-156	Solder Terminal	43
79-144	Cable Clamp	55	389-218	Solder Terminal	43
79-169	Cable Clamp	55	390-169	Solder Terminal	38
79-196	Cable Clamp	55	401-120	Solder Terminal	46
80-315	Solder Terminal	38	405-144	Solder Terminal	43
81-169	Jumper Terminal	49	414-113	Solder Terminal	41
93-250	Ring Terminal	30	416-093	Solder Terminal	46
110-250	Solder Terminal	48	417-144	Solder Terminal	46
115-196	Solder Terminal	48	421	Eyelet Terminal	22
115-250	Solder Terminal	48	437	Jumper Terminal	50
116-125	Cable Clamp	55	466-144	Fuse Clip	24

Part Number Cross Reference

Product Number	Product Type	Page	Product Number	Product Type	Page
520-196	Solder Terminal	44	774-NO PTS	Quick Disconnect Receptacle	20
542-093	Solder Terminal	38	775	Quick Disconnect Receptacle	19
547-196	Jumper Terminal	49	776	Quick Disconnect Receptacle	19
558-230	Solder Terminal	44	777	Quick Disconnect Receptacle	19
558-257	Solder Terminal	44	778	Quick Disconnect Receptacle	19
558-340	Solder Terminal	44	779	Quick Disconnect Receptacle	19
558-380	Solder Terminal	44	792	Screw Terminal	26
571-257	Solder Terminal	45	800-120	Lockwasher Terminal	36
574-130	Solder Terminal	47	800-144	Lockwasher Terminal	36
580-144	Quick Disconnect	14	800-169	Lockwasher Terminal	36
581-156	Quick Disconnect	10	801-120	Lockwasher Terminal	33
581-194	Quick Disconnect	10	801-144	Lockwasher Terminal	33
598-093	Solder Terminal	41	801-169	Lockwasher Terminal	33
599-156	Quick Disconnect	11	802-120	Lockwasher Terminal	32
599-156-STEEL-4	Quick Disconnect	11	802-144	Lockwasher Terminal	32
619-120	Solder Terminal	39	802-169	Lockwasher Terminal	32
619-144	Solder Terminal	39	803-120	Lockwasher Terminal	32
619-169	Solder Terminal	39	803-144	Lockwasher Terminal	32
619-196	Solder Terminal	39	803-169	Lockwasher Terminal	32
626-144	Solder Terminal	47	803-196	Lockwasher Terminal	32
626-196	Solder Terminal	47	804-120	Lockwasher Terminal	35
628-250	Ring Terminal	30	804-144	Lockwasher Terminal	35
629-250	Ring Terminal	30	804-169	Lockwasher Terminal	35
630-156	Angle Bracket	53	805-120	Lockwasher Terminal	34
630-156-STEEL	Angle Bracket	53	805-144	Lockwasher Terminal	34
648-063	Jumper Terminal	49	805-169	Lockwasher Terminal	34
667	Jumper Terminal	49	805-196	Lockwasher Terminal	34
680-130	Solder Terminal	41	806-196	Lockwasher Terminal	33
694-144	Solder Terminal	42	809-120	Lockwasher Terminal	34
694-169	Solder Terminal	42	809-144	Lockwasher Terminal	34
721-140	Quick Disconnect	5	809-169	Lockwasher Terminal	34
721-156	Quick Disconnect	5	810-120	Lockwasher Terminal	32
721-169	Quick Disconnect	5	810-144	Lockwasher Terminal	32
723-144	Angle Bracket	52	810-169	Lockwasher Terminal	32
731	Screw Terminal	28	813-264	Lockwasher Terminal	33
733-165	Angle Bracket	51	838	Quick Disconnect	15
736-135	Angle Bracket	52	850	Quick Disconnect Receptacle	19
741-135	Angle Bracket	52	851	Quick Disconnect Receptacle	19
761-375	Lockwasher Terminal	33	853-144	Quick Disconnect	8
762-264	Lockwasher Terminal	33	861-169	Quick Disconnect	15
763	Quick Disconnect	5	865	Angle Bracket	52
764	Quick Disconnect	12	867-169	Quick Disconnect	15
765	Quick Disconnect	6	868-100	Quick Disconnect	16
766	Quick Disconnect	14	875	Quick Disconnect	17
767	Quick Disconnect	14	878	Quick Disconnect	5
768	Quick Disconnect Receptacle	19	879-144	Quick Disconnect	15
769	Quick Disconnect Receptacle	19	883-125	Quick Disconnect	12
770	Quick Disconnect Receptacle	19	885-096	Quick Disconnect	11
771	Quick Disconnect Receptacle	20	887-156	Quick Disconnect	8
774	Quick Disconnect Receptacle	20	888-156	Quick Disconnect	8

Part Number Cross Reference

Product Number	Product Type	Page	Product Number	Product Type	Page
891-510	Solder Terminal	45	991	Quick Disconnect	14
897-140	Quick Disconnect	9	997	Fuse Clip	24
898-200	Quick Disconnect	7	1000	Lockwasher Terminal	33
898-200-MOD	Quick Disconnect	7	1006	Screw Terminal	26
899-265	Quick Disconnect	7	1006 NO TAP	Screw Terminal	26
899-406	Quick Disconnect	7	1020-096	Quick Disconnect Receptacle	21
900-140	Quick Disconnect	8	1030	Screw Terminal	27
905-120	Ring Terminal	29	1103-069	Quick Disconnect	16
905-144	Ring Terminal	29	1108	Screw Terminal	28
905-169	Ring Terminal	29	1116	Screw Terminal	27
911-140	Quick Disconnect	10	1116 ST.S	Screw Terminal	27
913-144-11	Ring Terminal	29	1117 ST.S	Screw Terminal	27
913-169-11	Ring Terminal	29	5000-130 SLOT-11	Strip Terminal	57
914-120	Ring Terminal	29	5012-196-11	Ring Terminal	31
914-144	Ring Terminal	29	5015	Strip Terminal	57
914-169	Ring Terminal	29	5017	Strip Terminal	57
915-144	Ring Terminal	29	5037-144	Ring Terminal	29
915-169	Ring Terminal	29	5037-144-11	Ring Terminal	29
916-093	Quick Disconnect	18	5037-169-11	Ring Terminal	29
918-196	Quick Disconnect	13	5038-094 OBSOLETE	Ring Terminal	30
919-096	Quick Disconnect Receptacle	21	5038-169 OBSOLETE	Ring Terminal	30
920-144	Quick Disconnect	5	5038-169-11 OBSOLETE	Ring Terminal	30
920-169	Quick Disconnect	5	5045	Strip Terminal	57
921-093	Quick Disconnect	18	5054	Strip Terminal	57
922-092	Lockwasher Terminal	32	CPB 9030	Screw & Wire Clamp	56
928	Screw Terminal	28	MS 35431-1	Solder Terminal	39
928-No Screw	Screw Terminal	28	MS 35431-3	Solder Terminal	39
929-130-XXXX	Quick Disconnect	13	MS 35431-5	Solder Terminal	39
931	Quick Disconnect Receptacle	20	MS 35431-7	Solder Terminal	39
932-265	Lockwasher Terminal	34	MS 35431-9	Solder Terminal	39
934 ST.S	Screw Terminal	28	MS 35431-10	Solder Terminal	38
936-196	Lockwasher Terminal	34	MS 35431-14	Solder Terminal	37
936-265	Lockwasher Terminal	34	MS 77066-1	Lockwasher Terminal	35
937-196	Lockwasher Terminal	34	MS 77066-2	Lockwasher Terminal	35
937-224	Lockwasher Terminal	34	MS 77066-3	Lockwasher Terminal	35
937-265	Lockwasher Terminal	34	MS 77067-1	Lockwasher Terminal	32
938	Quick Disconnect	15	MS 77067-2	Lockwasher Terminal	32
939	Quick Disconnect	15	MS 77067-3	Lockwasher Terminal	32
941	Eyelet Terminal	22	MS 77068-1	Lockwasher Terminal	34
945	Screw Terminal	26	MS 77068-2	Lockwasher Terminal	34
947-144	Lockwasher Terminal	32	MS 77068-3	Lockwasher Terminal	34
951-130	Lockwasher Terminal	32	MS 77068-4	Lockwasher Terminal	34
952-136	Solder Terminal	37	MS 77069-1	Lockwasher Terminal	34
961	Quick Disconnect Receptacle	20	MS 77069-2	Lockwasher Terminal	34
961-032BR	Quick Disconnect Receptacle	20	MS 77069-3	Lockwasher Terminal	34
967	Quick Disconnect	6	MS 77070-1	Lockwasher Terminal	33
968	Quick Disconnect	9	MS 77070-2	Lockwasher Terminal	33
969	Quick Disconnect	12	MS 77070-3	Lockwasher Terminal	33
970	Quick Disconnect	5	MS 77070-5	Lockwasher Terminal	33
975	Eyelet Terminal	22	MS 77072-1	Lockwasher Terminal	32
982	Eyelet Terminal	23	MS 77072-2	Lockwasher Terminal	32
988	Eyelet Terminal	23	MS 77072-4	Lockwasher Terminal	32
989	Quick Disconnect	18	MS 77073-1	Lockwasher Terminal	34
			MS 77073-2	Lockwasher Terminal	34